



WARNING: BEFORE USAGE, THE INSTRUCTION MUST BE READ.


THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.

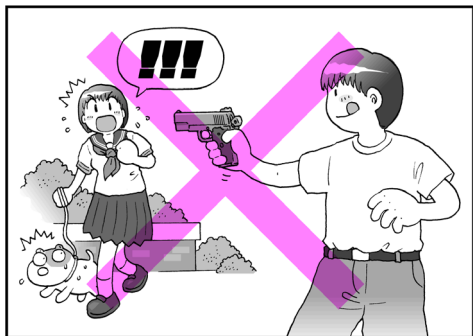

DO NOT POINT AT PEOPLE OR ANIMAL.

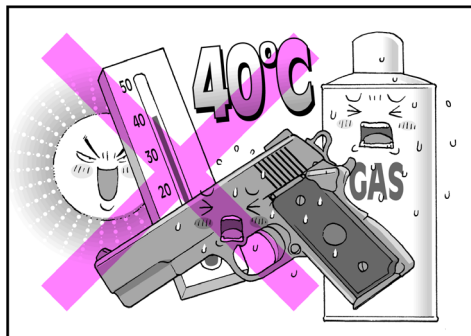


GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C

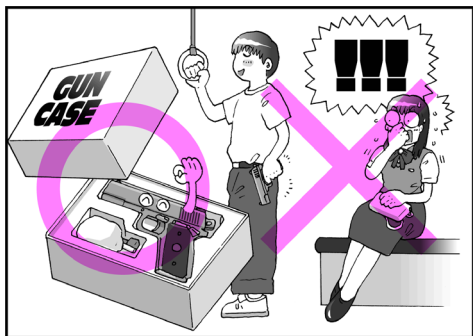


PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm²

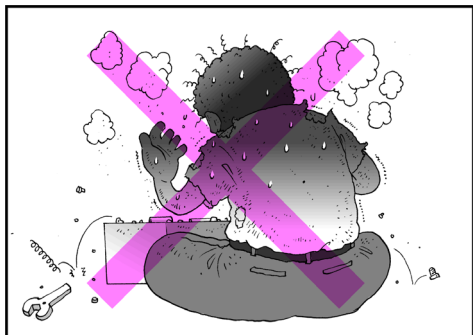

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.

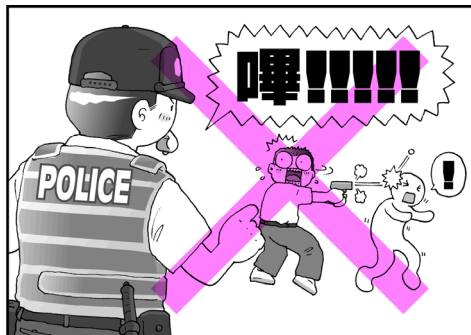


BE CAREFULL WHAT TARGET YOU SHOOT




EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.

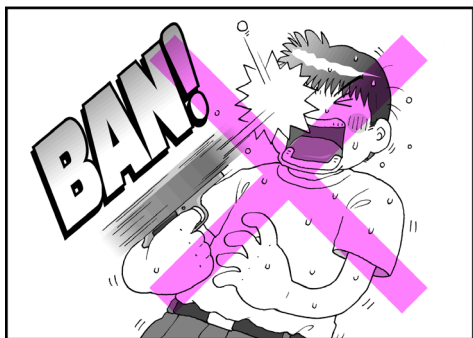


DO NOT LOOK THROUGH THE BARREL

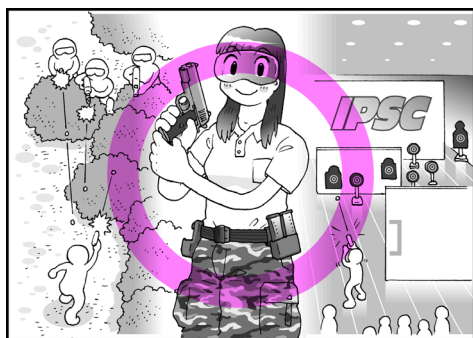

PLEASE SHOOT IN SAFE PLACE

OPERATION

1. REMOVE THE MAGAZINE

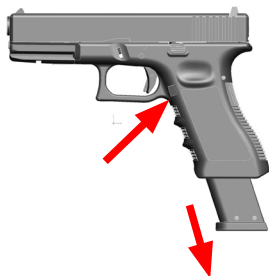


PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

2. FILLING GAS

GAS MAG

CO2 MAG

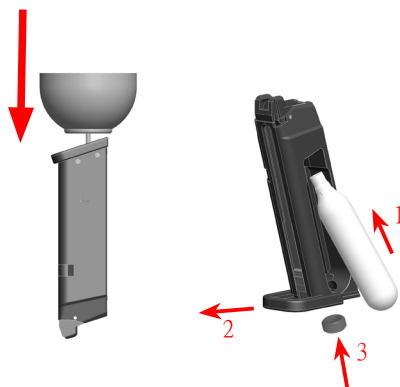

GAS MAG:
FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICAL DIRECTOR.
CO2 MAG:
Follow the instruction to insert the cartridge

3.LOAD BB




PULL DOWN FOLLOWER AND LOAD BB.

4 INSERT MAGAZINE




5.LOAD

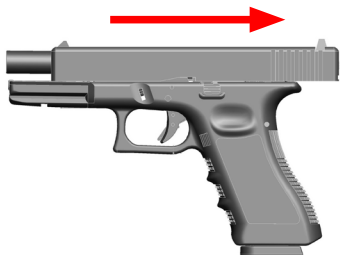

PULL THE SLIDE TO LOAD


6.FIRE

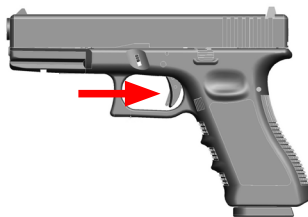

PULL THE TRIGGER


7.SAFE

SAFETY ON

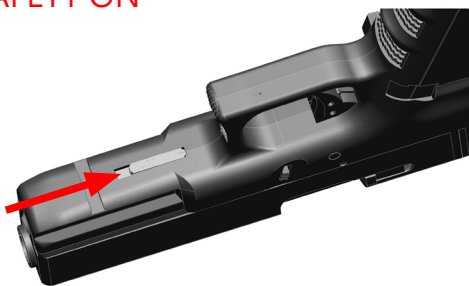

SWITCH TO ON POSITION


SAFETY OFF

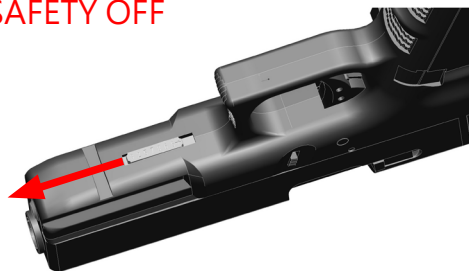


SWITCH TO OFF POSITION

DISASSEMBLY


1.PULL BACK SLIDE AND PULL DOWN SLIDE LOCK

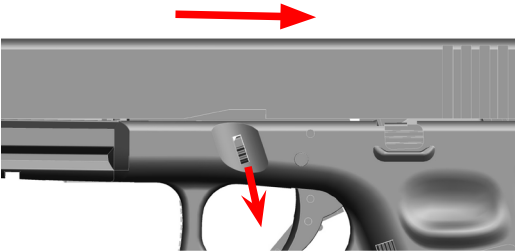


2.REMOVE THE SLIDE

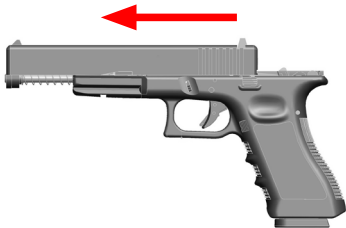

3.REMOVE THE RECOIL SPRING AND GUIDE

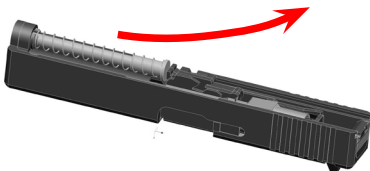


4.REMOVE THE BARREL

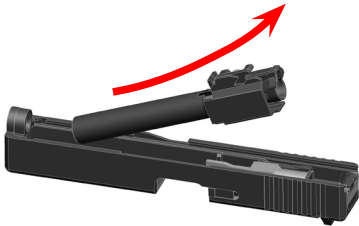


ASSEMBLY


REVERSE THE DISASSEMBLY
ADJUST TREJECTORY

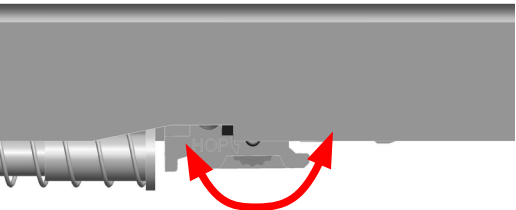

TURN ADJUST DIAL ACCORDING TO THE TREJECTORY

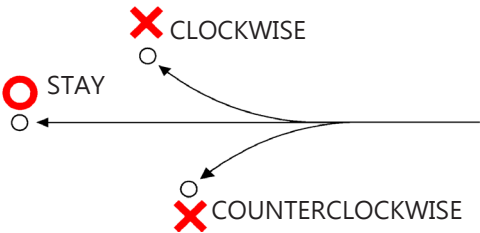

KP-17 Exploded Drawing

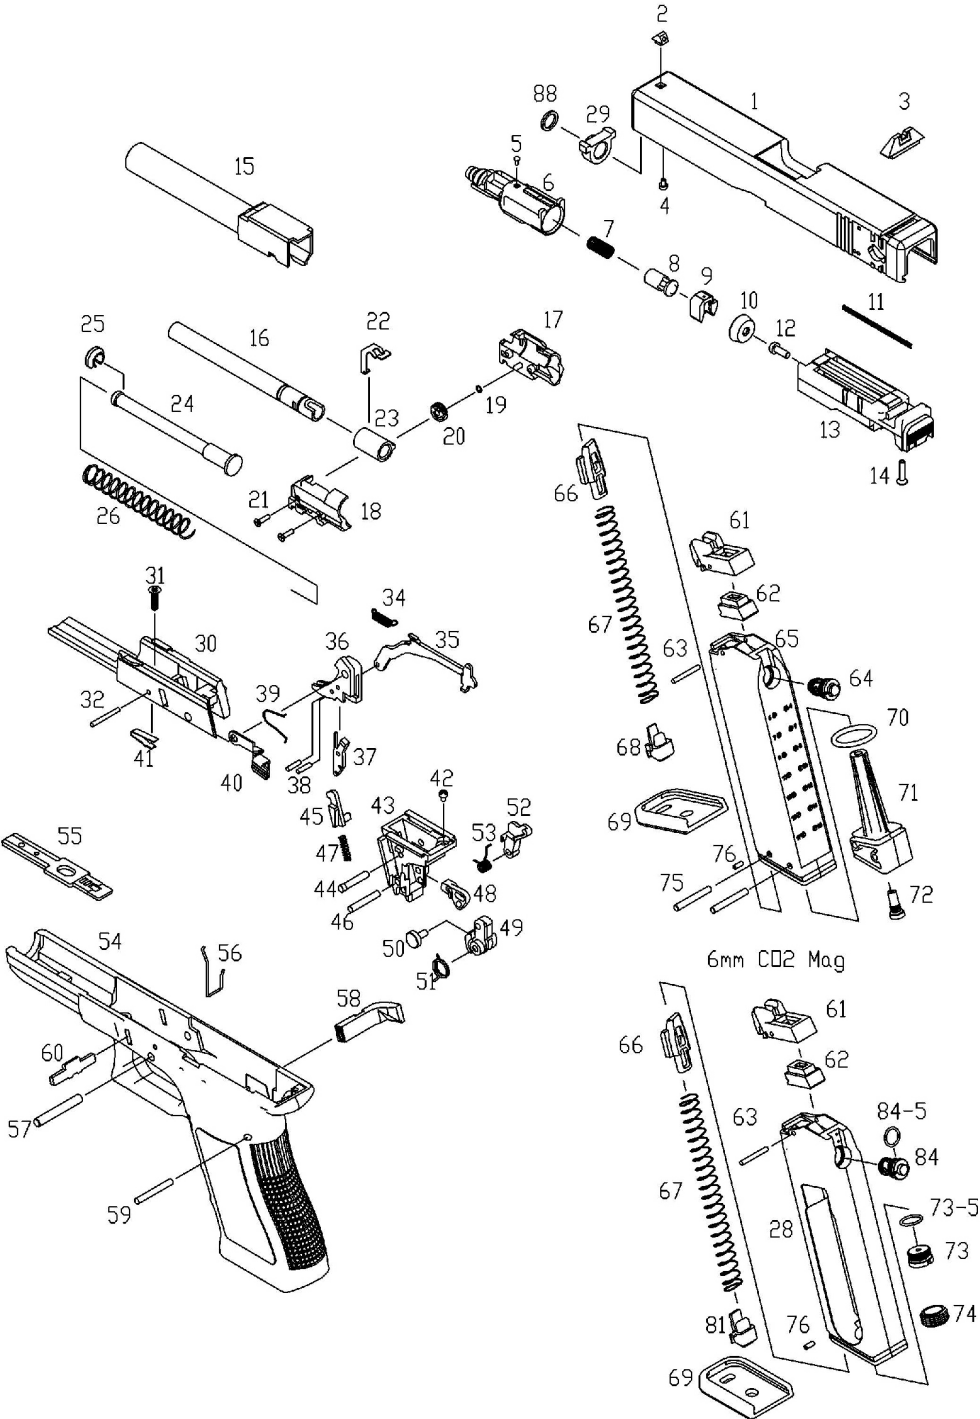

NO.	NAME	PRICE	NO.	NAME	PRICE
1	SLIDE	1600	43	HAMMER HOUSING	300
2	FRONT SIGHT	60	44	HAMMER PIN	20
3	REAR SIGHT	120	45	VALVE LOCK	60
4	FRONT SIGHT SCREW	20	46	SEAR PIN	20
5	FLOATING VALVE PIN	30	47	VALVE LOCK SP	20
6	CYLINDER	180	48	KNOCKER	120
7	FLOATING VALVE SP	20	49	HAMMER	150
8	FLOATING VALVE	30	50	HAMMER CAM	80
9	FLOATING VALVE BLOCKER	40	51	HAMMER SP	30
10	PISTON RING	50	52	SEAR	80
11	CYLINDER SP	30	53	SEAR SP	30
12	PISTON SCREW	10	54	FRAME	800
13	PISTON	400	55	SAFETY	120
14	REAR SIGHT SCREW	10	56	MAG CATCH SP	30
15	OUTTER BARREL	500	57	TRIGGER PIN	20
16	INNER BARREL	240	58	MAG CATCH	160
17	CHAMBER (R)	160	59	HAMMER HOUSING PIN	20
18	CHAMBER(L)	160	60	SLIDE LOCK	80
19	ADJUST DIAL O-RING	10	61	BB LIP	80
20	ADJUST DIAL	40	62	GASKET	100
21	CHAMBER SCREW	20	63	BB LIP PIN	20
22	ADJUST LEVER	60	64	EX VALVE	180
23	RUBBER CHAMBER	80	65	MAG BODY	450
24	RECOIL GUIDE	160	66	FOLLOWER	40
25	RECOIL GUIDE WASHER	40	67	FOLLOWER SP	60
26	RECOIL SP	60	68	MAG BOTTOM STOP	30
28	MAG BODY (CO2 MAG)	450	69	MAG BOTTOM	150
29	SLIDE PAD	60	70	MAG BASE O-RING	30
30	TRIGGER HOUSING	300	71	MAG BASE	200
31	TRIGGER HOUSING SCREW	10	72	CHARGE VALVE	80
32	SAFETY SP PIN	20	73	STAB	180
34	TRIGGER BAR SP	30	73-5	STAB O-RING	30
35	TRIGGER BAR	200	74	MAG BASE NUT(CO2 MAG)	100
36	TRIGGER	120	75	MAG BASE PIN	20
37	TRIGGER SAFETY	60	76	MAG BOTTOM STOP DETENT	20
38	TRIGGER SAFETY PIN	20	81	MAG BOTTOM STOP	30
39	SLIDE STOP SP	30	84	EX-VALVE	240
40	SLIDE STOP	100	84-5	EX VALVE O-RING	30
41	SAFETY SP	30	88	RECOIL GUIDE PAD	40
42	HAMMER HOUSING SCREW	10			

KP-17

MANUAL

KJWORKS

Kjworks No.12 Lian-Ming 1st Street,Bade City,Taoyuan county,Taiwan
Tel:03-3749793 Fax:03-3618130 e-mail:kjworks@ms47.hinet.net
www.kjworks.com.tw