



WARNING: BEFORE USAGE, THE INSTRUCTION MUST BE READ.


THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.

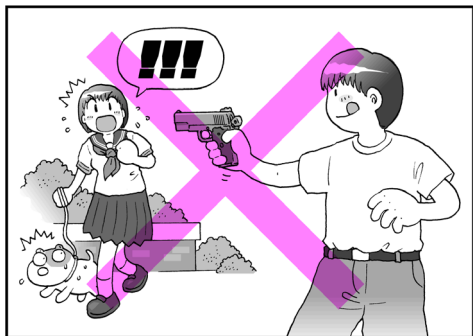

DO NOT POINT AT PEOPLE OR ANIMAL.

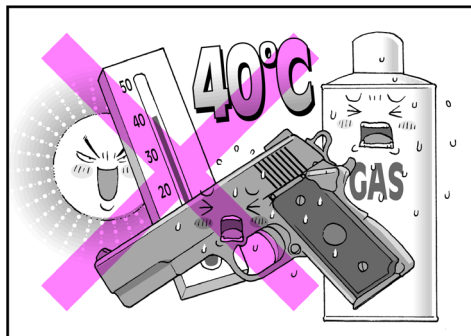


GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C

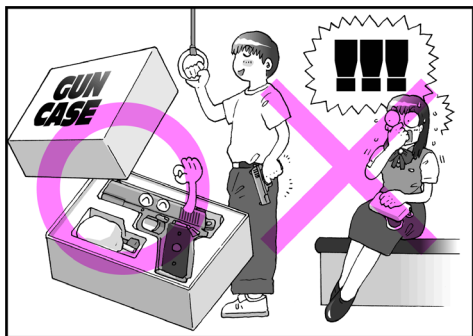


PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm²

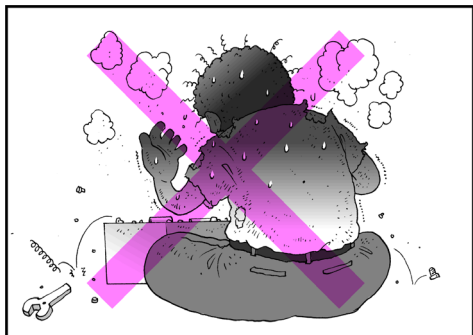

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.

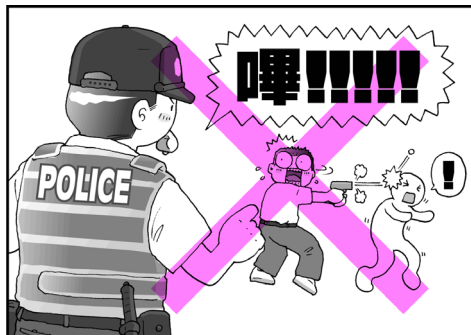


BE CAREFULL WHAT TARGET YOU SHOOT




EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.

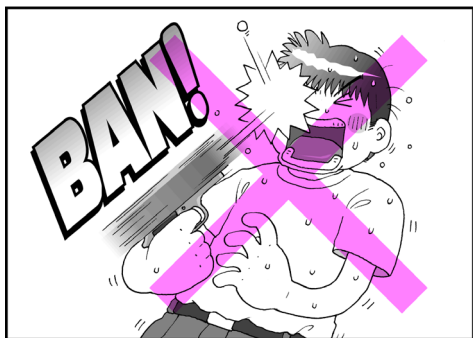


DO NOT LOOK THROUGH THE BARREL

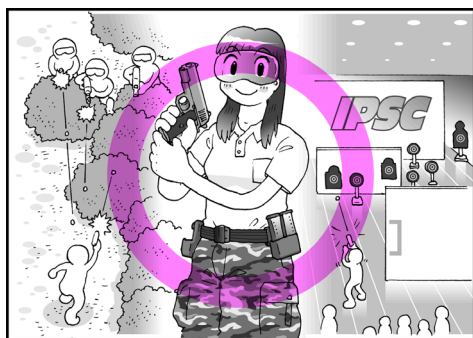

PLEASE SHOOT IN SAFE PLACE

OPERATION

1. REMOVE THE MAGAZINE

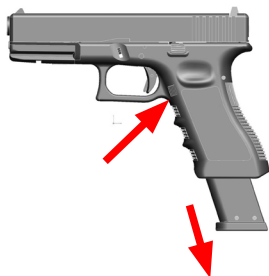


PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

2. FILLING GAS

GAS MAG

CO2 MAG

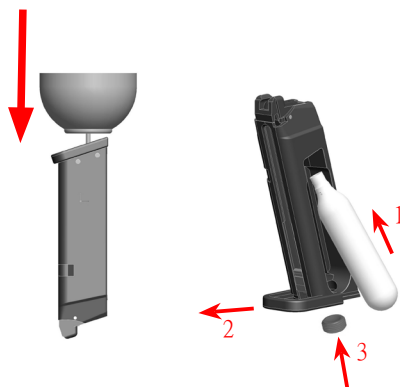

GAS MAG:

FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICAL DIRECTOR.

CO2 MAG:

Follow the instruction to insert the cartridge

3.LOAD BB




PULL DOWN FOLLOWER AND LOAD BB.

4 INSERT MAGAZINE




5.LOAD

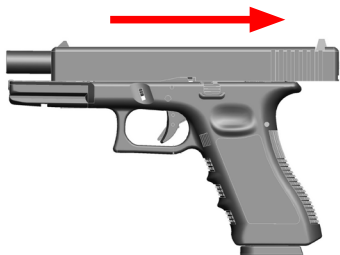

PULL THE SLIDE TO LOAD


6.FIRE

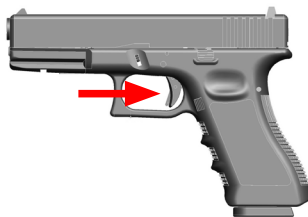


PULL THE TRIGGER

7.FIRE MODE

SEMAUTO

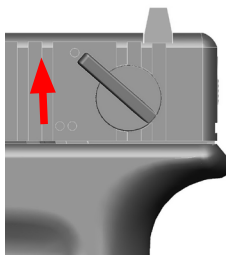


FULLAUTO

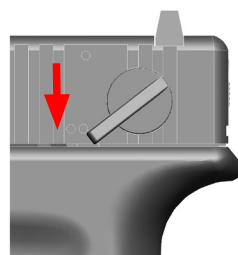


8.SAFE

SAFETY ON

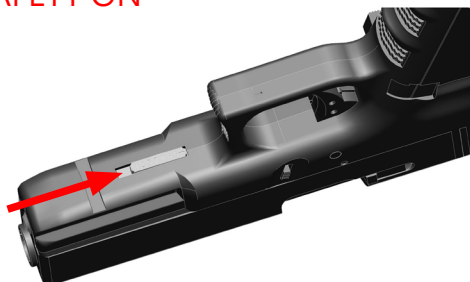

SWITCH TO ON POSITION


SAFETY OFF

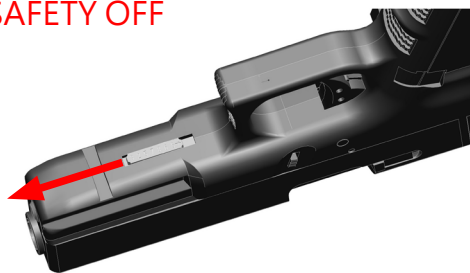


SWITCH TO OFF POSITION

DISASSEMBLY


1. PULL BACK SLIDE AND PULL DOWN SLIDE LOCK

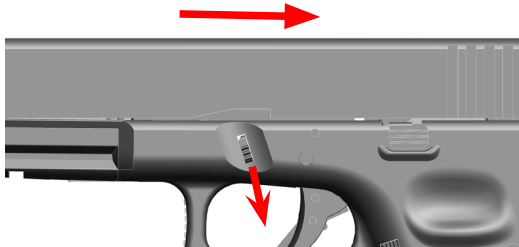


2. REMOVE THE SLIDE

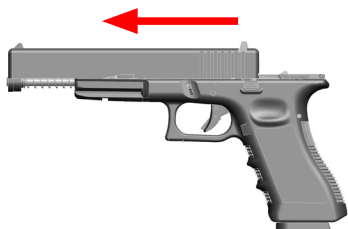

3. REMOVE THE RECOIL SPRING AND GUIDE

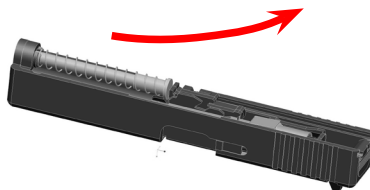


4. REMOVE THE BARREL

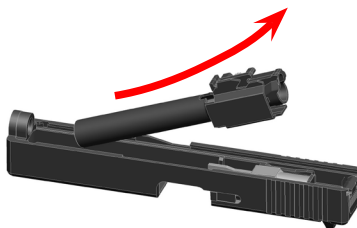


ASSEMBLY


REVERSE THE DISASSEMBLY
ADJUST TREJECTORY

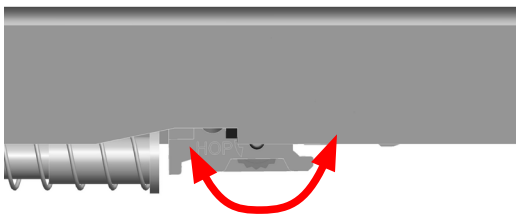

TURN ADJUST DIAL ACCORDING TO
THE TREJECTORY

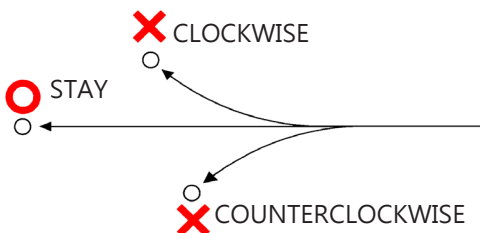

KP-18 Exploded Drawing

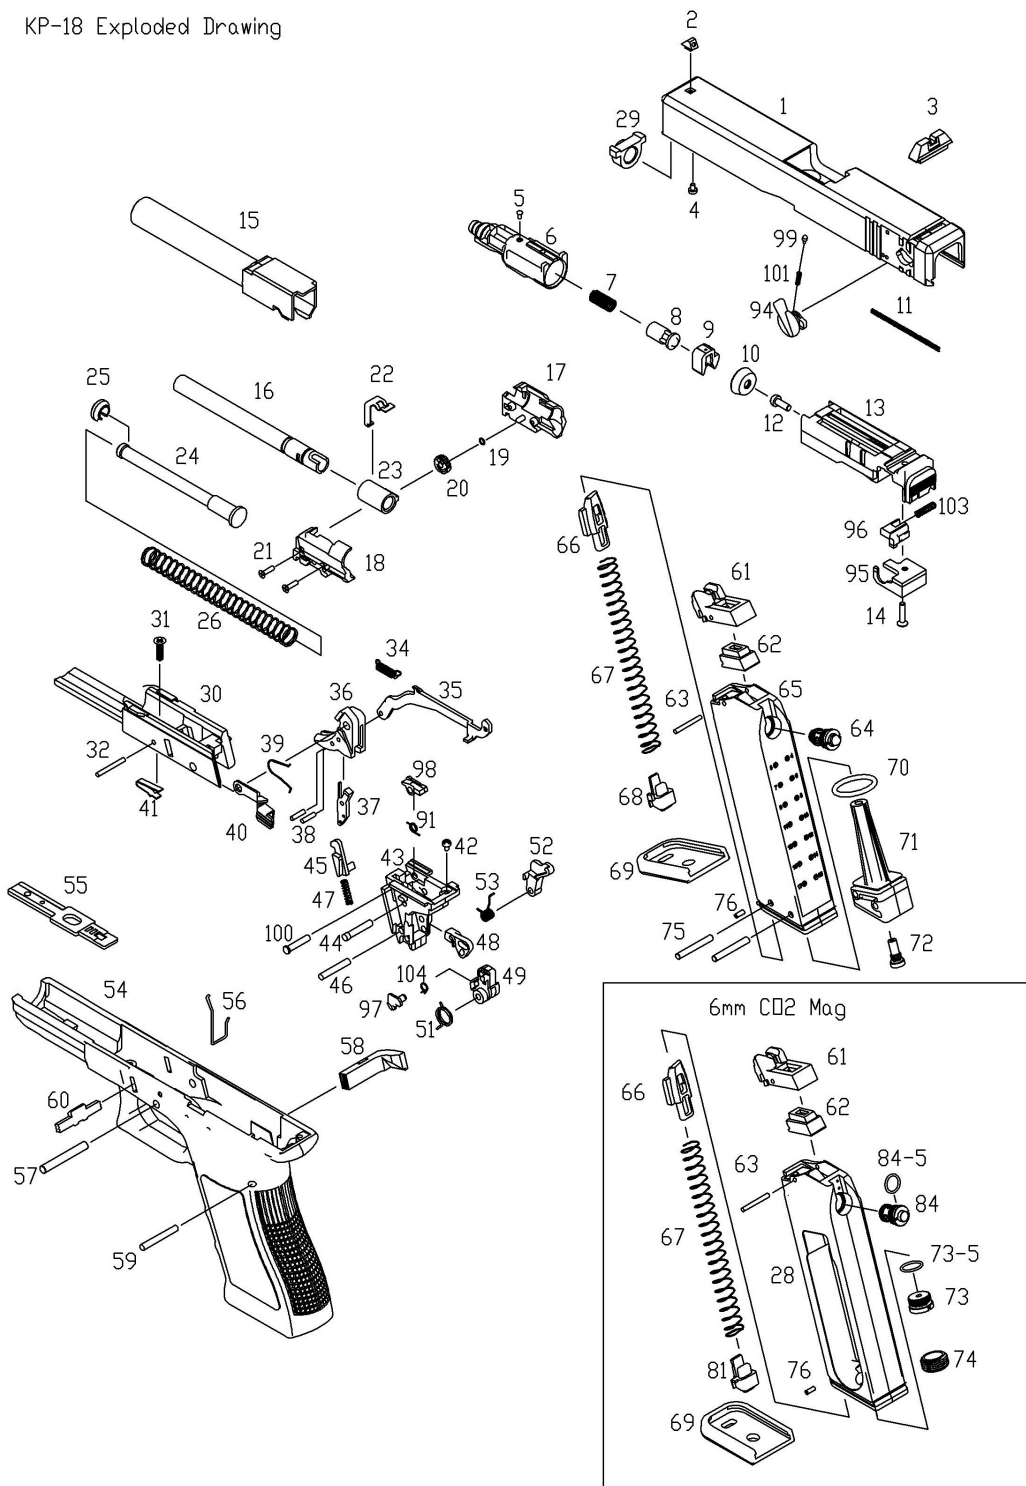

NO.	NAME	PRICE	NO.	NAME	PRICE
1	SLIDE	1800	48	KNOCKER	120
2	FRONT SIGHT	60	49	HAMMER	150
3	REAR SIGHT	120	51	HAMMER SP	30
4	FRONT SIGHT SCREW	20	52	SEAR	80
5	FLOATING VALVE PIN	30	53	SEAR SP	30
6	CYLINDER	180	54	FRAME	800
7	FLOATING VALVE SP	20	55	SAFETY	120
8	FLOATING VALVE	30	56	MAG CATCH SP	30
9	FLOATING VALVE BLOCKER	40	57	TRIGGER PIN	20
10	PISTON RING	50	58	MAG CATCH	160
11	CYLINDER SP	30	59	HAMMER HOUSING PIN	20
12	PISTON SCREW	10	60	SLIDE LOCK	80
13	PISTON	400	61	BB LIP	80
14	REAR SIGHT SCREW	10	62	GASKET	100
15	OUTTER BARREL	500	63	BB LIP PIN	20
16	INNER BARREL	240	64	EX VALVE	180
17	CHAMBER (R)	160	65	MAG BODY	450
18	CHAMBER(L)	160	66	FOLLOWER	40
19	ADJUST DIAL O-RING	10	67	FOLLOWER SP	60
20	ADJUST DIAL	40	68	MAG BOTTOM STOP	30
21	CHAMBER SCREW	20	69	MAG BOTTOM	150
22	ADJUST LEVER	60	70	MAG BASE O-RING	30
23	RUBBER CHAMBER	80	71	MAG BASE	200
24	RECOIL GUIDE	160	72	CHARGE VALVE	80
25	RECOIL GUIDE WASHER	40	73	STAB	100
26	RECOIL SP	60	73-5	STAB O-RING	20
28	MAG BODY (CO2 MAG)	450	74	MAG BASE NUT(CO2 MAG)	100
29	SLIDE PAD	60	75	MAG BASE PIN	20
30	TRIGGER HOUSING	300	76	MAG BOTTOM STOP DETENT	20
31	TRIGGER HOUSING SCREW	10	81	MAG BOTTOM STOP	30
32	SAFETY SP PIN	20	84	EX-VALVE	240
34	TRIGGER BAR SP	30	84-5	EX VALVE O-RING	20
35	TRIGGER BAR	200	91	AUTO SEAR SPRING	30
36	TRIGGER	120	94	FIRE SELECTOR	150
37	TRIGGER SAFETY	60	95	LEVER HOUSING	150
38	TRIGGER SAFETY PIN	20	96	LEVER	150
39	SLIDE STOP SP	30	97	HAMMER CAM	180
40	SLIDE STOP	100	98	AUTO SEAR	150
41	SAFETY SP	30	99	SELECTOR DETENT	60
42	HAMMER HOUSING SCREW	10	100	AUTO SEAR PIN	30
43	HAMMER HOUSING	300	101	SELECTOR SPRING	30
44	HAMMER PIN	20	103	LEVER SPRING	30
45	VALVE LOCK	60	104	HAMMER CAM SPRING	30
46	SEAR PIN	20			
47	VALVE LOCK SP	20			

KP-18

MANUAL

KJWORKS

Kjworks No.12 Lian-Ming 1st Street,Bade City,Taoyuan county,Taiwan
Tel:03-3749793 Fax:03-3618130 e-mail:kjworks@ms47.hinet.net
www.kjworks.com.tw