



INSTRUCTION MANUAL FIREHAWK AEG SYSTEM



⚠ WARNING !!

- Adult supervision required.
- Always wear safety goggles when using this product.
- Misuse or careless handling of this product may cause injury.
- May be hazardous up to 50 meters.
- This product is intended for users 18 years or older.
- Read all instructions before using this product.
- The buyer and the user of this product shall adhere to all local laws regulating the usage and the ownership of airsoft guns.



FIRING MODE & SAFETY



SAFETY ON
The trigger cannot be pulled



SEMI AUTO
Single shot



FULL AUTO
Automatic firing

COMPONENTS

BATTERY SETTING



1. Charge up the battery.
2. Charging will be completed after 3 hours.



Remove the stock to install battery by pulling down levers on the side as shown in the graphic.



Find the connector in the stock tube.



Install battery until it click into place.



Insert the battery into stock.



Reinstall stock.

⚠ CAUTION

1. Please select quality battery with the CE approval, to avoid any unnecessary damage on the product.
2. Please use either 8.4V or 9.6V battery, if different voltage used, it might damage the product.
3. Remove the battery from the product when it is not in use.
4. Do not wet nor incinerate the battery, nor to deform the terminal.

SETTING MAGAZINE

Magazine Style 420R BB Loader [Optional Parts]

Model No. G-08-100-1



1. Open the trap door on the top of the BB loader.
2. Load G&G 5.95mm BB pellets into the Magazine style BB Loader.
3. Connect magazine style loader with the 120R Magazine.
4. Slide the retainer to release the injection lever.
5. Press the injection lever to load BBs into the magazine. Continue loading until the magazine is full. Load G&G 5.95mm BB pellets into the magazine.



Close the cover plate then turn the gear until the sound changes.



Insert the magazine until you heard a click sound.

HOP-UP ADJUSTMENT

⚠ CAUTION

Do not catch your fingers in the dummy bolt. Never hold the gun sideways as the BB pellets will curve right or left.



- Too much Hop-up. (Turn the adjust lever toward Normal)
- Best Position.
- Not enough Hop-up. (Turn the adjust lever toward Hop) or Too much Hop-up. (Turn the adjust lever toward Normal)




⚠ CAUTION
It is strongly recommended the use of G&G BB pellets only. Using low quality BB pellets will shorten product life span and void product warranty.

INSTRUCTION MANUAL

FIREHAWK AEG SYSTEM



RETRACTABLE GOS-V2 STOCK

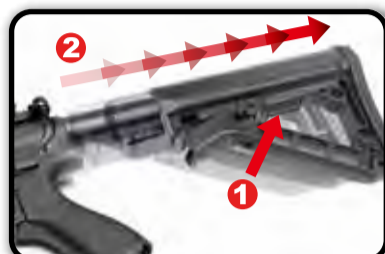

Pull the release lever to adjust the position of the stock. (6 positions)




Pull the locking lever until it click into place to secure the position of the stock.

MAINTENANCE



Remove the magazine.

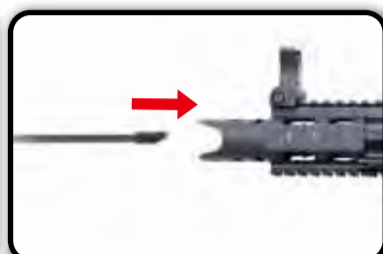

Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel.



Be aware to have the rod facing down and reaching to the end, and remove clogged pellets.

TROUBLE SHOOTING



The screw at bottom of the grip. Please use the screwdriver to adjust. Adjust screw when the gear noise becomes shrilly.



No operation. Check the wire set contact with motor.



No operation. Check the battery and connector.

SIGHT ADJUSTMENT



Hold down the button to fold the rear sight and front sight.



Turn the screw counterclockwise to take off the screw and remove the sight.

EXTRA STORAGE SPACE



Press the button.



Pull out the grip to show the extra storage space.

PARTS LIST

FIREHAWK - 01 Upper Receiver Set	FIREHAWK - 11 Motor
FIREHAWK - 02 SuppressorHop Up Set	FIREHAWK - 12 GOS-V2 Stock Set
FIREHAWK - 03 Gear Box Set	FIREHAWK - 13 Sling Swivel Mount
FIREHAWK - 04 Magazine	FIREHAWK - 14 Wire
FIREHAWK - 05 Grip Set	FIREHAWK - 15 Port Cover Set
FIREHAWK - 06 Rear Sight	FIREHAWK - 16 Charging Handle Set
FIREHAWK - 07 Flip-up Front Sight	FIREHAWK - 17 Hop Up Set
FIREHAWK - 08 Stock Tube	FIREHAWK - 18 Dummy Bolt Plate
FIREHAWK - 09 Rail System	FIREHAWK - 19 Grip Bottom Set
FIREHAWK - 10 Lower Receiver Set	

TAIWAN

Sales Dept. | sales@guay2.com , b2b@guay2.com
Technology Support Dept. | support@guay2.com
PR Dept. | pr@guay2.com

Chang Hua Headquarter | Tel : +886-4-798-9000 Fax : +886-4-798-9900
No.999, Zhonghua Rd. Shengang Township, Changhua County 50955, Taiwan (R.O.C.)

Taipei | Tel : +886-2-2692-2000 Fax : +886-2-2692-4000
11F-3., No.27, Lane 169, Kangning St. Shijr City, Taipei County 22180, Taiwan (R.O.C.)

U.S.A.

E-mail | sales101@guay2.com

Los Angeles | Tel : +1-626-581-0101 Fax : +1-626-581-1011
1122 Coiner Court, City of Industry, CA 91748 (U.S.A.)

Dealer

▶ You may purchase all of the groups' parts from G&G support Dep.

▶ E-Mail: support@guay2com

